

CS1-F Frequency Indicator



DESCRIPTION

CS1-F **economic** type Frequency Indicator has been designed with high accuracy measurement, display and communication of Frequency.

- ☑ The innovation feature is auto-range input from 0.01Hz~100KHz(option ~140KHz) and the display resolution will auto-change to show the highest according to input frequency.

They are also available 1 option of 1 Relay outputs, 1 Analogue output or 1 RS485(Modbus RTU Mode) interface with versatile functions such as control, alarm, re-transmission or communication for a wide range of panels and testing applications.




FEATURE

- Measuring Frequency **AUTO RANGE 0.01~100KHz / ~140KHz(optional) / Voltage pulse or sine wave(specify).**
- Accuracy: $\pm 0.005\%$; Display range: 0~99999; Decimal Point auto moving according to input frequency
- Option available 1 of 1 relay, 1 analogue output or RS485(Modbus RTU mode)
- 1 relay can be programmed individual to be a Hi / Lo / Hi Latch / Lo Latch energized with Start Delay / Hysteresis / Energized & De-energized Delay functions.
- Analogue output or RS 485 communication port in option
- CE Approved & RoHS

APPLICATIONS

- MCC panel, Machinery, Switch gear... for Frequency Measuring, Alarm or Communication with PC/PLC
- ☑ Fantastic 4 Relay functions as like as Hi / Lo / Hi latch / Lo latch / DO(Remote control by PC/PLC).
- ☑ Flexible 3 DI functions as like as Reset for Relay energized and Remote monitoring by PC/PLC.
- Testing Equipments for Frequency Measuring, Alarm or Communication with PC/PLC
- ☑ Flexible 3 DI functions as like as Maximum/Minimum hold, PV hold and Relative PV.
- ☑ On line testing station for appliance, check points of PCB as so on.

ORDERING INFORMATION

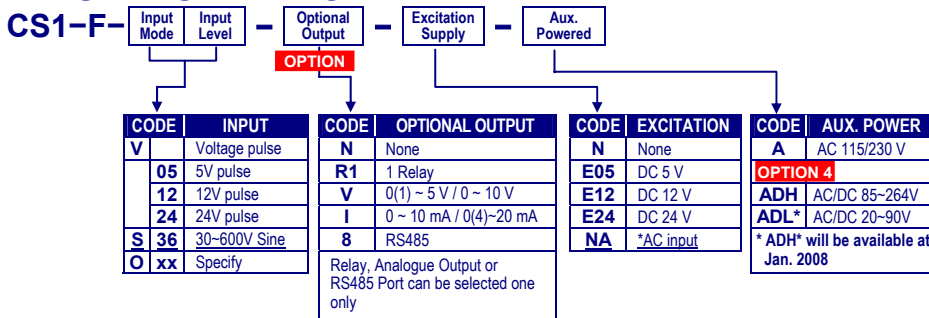

TECHNICAL SPECIFICATION

Input

Input Frequency	Input Mode	Input Level
0.01Hz ~ 50 Hz	Voltage Pulse	High Level: over 2/3 of input level
0.01Hz ~ 100KHz		Low Level: under 1/3 of input level
0.01Hz ~ 140KHz (option)	Sine Wave	

- Calibration:** Doesn't need calibration
- Input range:** **Auto range: 0.01Hz ~ 100KHz (~140KHz in option);**
- Accuracy:** $\leq \pm 0.005\%$ of FS $\pm 1C$;
- Sampling time:** 15 cycles/sec($\geq 15Hz$);
f cycles/sec($\leq 15Hz$)
- Response time:** ≤ 100 msec(when the AvG = "1")
- Time out function:** Auto, Manual programmable, In manual mode, the period of time out can be set 0.0 sec~999.9sec

Display & Functions

- LED:** Numeric: 5 digits, 0.8"(20.0mm)H red high-brightness LED
Relay output indication: 1 square red LED

- RS 485 communication: 1 square orange LED
- E.C.I. function indication: 1 square green LED
- Max/Mini Hold indication: 2 square orange LED
- Down key function indication(Reset for Max.(Mini.) Hold / PV Hold / Rel. PV): 1 square green LED
- Display range:** 0.0000~99999 with auto moving of decimal point
- Resolution of PV:** Decimal point will Auto-changed according to input
- (Auto-Moving for d.p.)** **Auto / Semi-Auto / Fix; 3 mode programmable**
- Compensation factor:** Compensate error from 0.001~9.999
- Over range indication:** ovFL, when input is over 120% of input range Hi
- Max / Mini recording:** Maxi & Mini Value of PV storage during power on.
- Display functions:** **PV / Max(Mini) Hold / RS 485 programmable**
- Front key functions:** **Relative PV / PV Hold / Reset for maxi(mini) hold / Reset for relay energized latch programmable**
- Low cut:** Settable range: -19999~29999 counts
- Digital fine adjust:** Pv.Zro: Settable range: 0~+99999
Pv.SPn: Settable range: 0~+99999

Reading Stable Function

Average:	Settable range: 1~99 times
Moving average:	Settable range: 1(None)~10 times
Digital filter:	Settable range: 0(None)/1~99 times

Control Functions(option)

Set-points:	One set-point
Control relay:	1 Relay, FORM-C, 5A/230Vac, 10A/115V
Relay energized mode:	Energized levels compare with set-points: <i>Hi / Lo / Hi.HLd / Lo.HLd</i> programmable
Energizing functions:	Start delay / Energized & De-energized delay / Hysteresis Energized Latch
Start band (Minimum level for Energizing):	0~9999counts
Start delay time:	0:00.0~9(Minutes):59.9(Second)
Energized delay time:	0:00.0~9(Minutes):59.9(Second)
De-energized delay time:	0:00.0~9(Minutes):59.9(Second)
Hysteresis:	0~5000 counts

Analogue output(option)

Accuracy:	$\leq \pm 0.1\%$ of F.S.;
Ripple:	$\leq \pm 0.1\%$ of F.S.
Response time:	≤ 100 msec. (10~90% of input)
Isolation:	AC 2.0 KV between input and output
Output range:	Specify either Voltage or Current output in ordering Voltage: 0~5V / 0~10V / 1~5V programmable Current: 0~10mA / 0~20mA / 4~20mA programmable
Output capability:	Voltage: 0~10V; $\geq 1000\Omega$; Current: 4(0)~20mA; $\leq 600\Omega$ max
Functions:	Ao.HS (output range high): Settable range: -19999~29999 Ao.LS (output range Low): Settable range: -19999~29999 Ao.Zro: Settable range: -38011~27524 Ao.SPn: Settable range: -38011~27524
Digital fine adjust:	

RS 485 Communication(option)

Protocol:	Modbus RTU mode
Baud Rate:	1200/2400/4800/9600/19200/38400 programmable
Data Bits:	8 bits
Parity:	Even, odd or none (with 1 or 2 stop bit) programmable
Address:	1 ~ 255 programmable
Remote Display:	to show the value from RS485 command of master
Distance:	1200M
Terminate Resistor:	150 Ω at last unit.

Electrical Safety

Dielectric Strength:	AC 2.0 KV for 1 min, Between Power / Input / Output / Case
Insulation Resistance:	$\geq 100M$ ohm at 500Vdc, Between Power / Input / Output
Isolation:	Between Power / Input / Relay, Analogue, RS485
EMC:	EN 55011:2002; EN 61326:2003
Safety(LVD):	EN 61010-1:2001

Environmental



Operating Temp.:	0~60 °C
Operating Humidity:	20~95 %RH, Non-condensing
Temp. Coefficient:	≤ 100 PPM/°C
Storage Temp.:	-10~70 °C
Enclosure:	Front panel: IEC 549 (IP54); Housing: IP20

Mechanical



Dimensions:	96mm(W) x 48mm(H) x 72mm(D)
Panel cutout:	92mm(W) x 44mm(H)
Case materiel:	ABS fire-resistance (UL 94V-0)
Mounting:	Panel flush mounting
Terminal block:	Plastic NYLON 66 (UL 94V-0) 10A 300Vac, M2.6, 1.3~2.0mm ² (16~12AWG)
Weight:	550g / 350g(Aux. Power Code: ADH or ADL)

Power

Power Supply:	AC115/230V, 50/60Hz; Optional: AC/DC 85~264V or 20~90V(RoHS version)
Excitation Supply:	DC12V, 24V/30mA maximum
Power Consumption:	5.0VA maximum
Back Up Memory:	By EEPROM

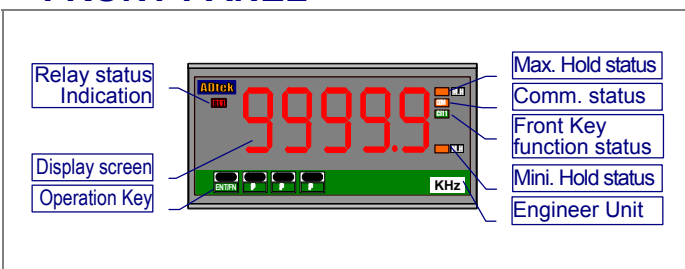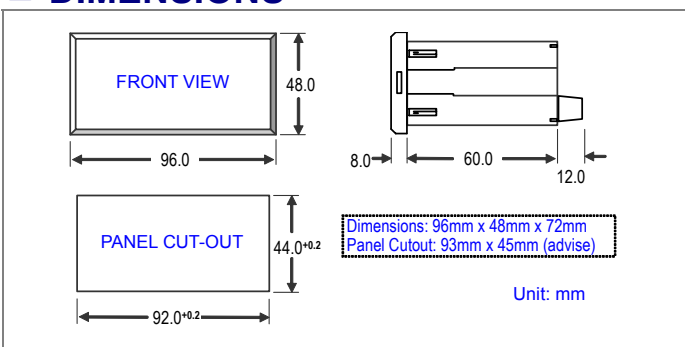FRONT PANEL**DIMENSIONS****INSTALLATION**

The meter should be installed in a location that dose not exceed the maximum operating temperature and provides good air circulation.

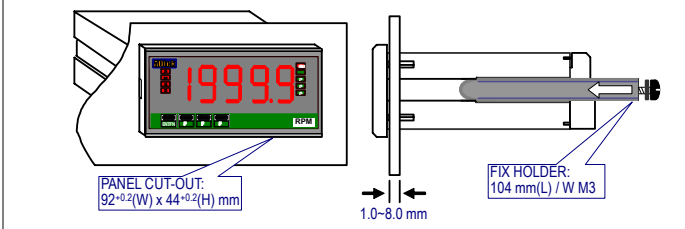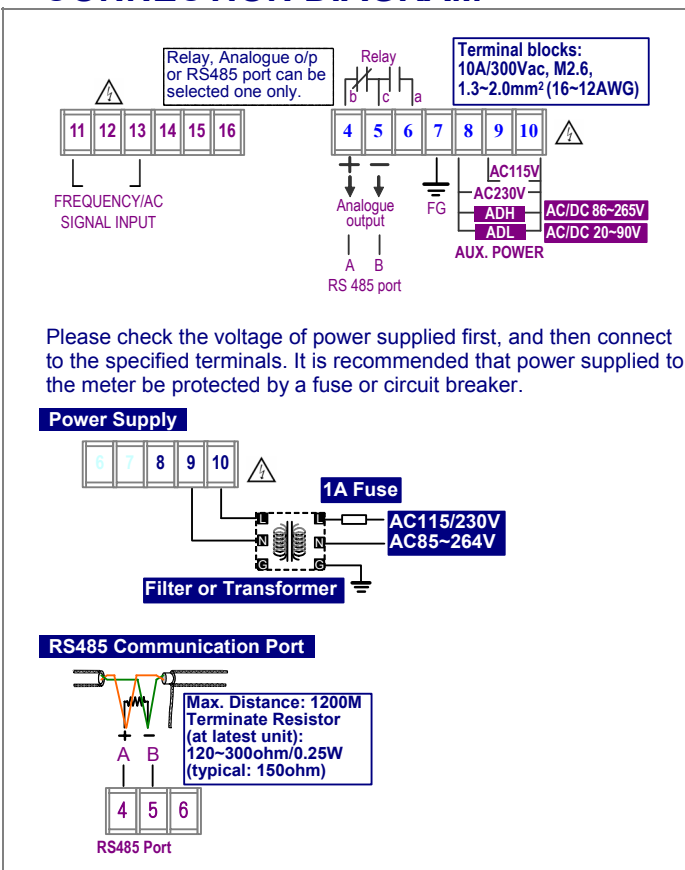**CONNECTION DIAGRAM**

FUNCTION DESCRIPTION

Input Functions

Input range: Auto-Range: 0.01Hz~100.00KHz(option 140KHz),

The meter has been designed very wide input auto-range from 0.01Hz~100.00KHz (Option: 0.01Hz~140.00KHz) that can cover almost any application for RPM, Linear Line Speed and Frequency. User doesn't need to specify the input range.

Auto range display: programmable between Auto Range / Semi-Auto Range / manual range. The description as below.

Auto range [Auto]: The decimal point will be auto according to the input frequency so that keep in the highest resolution.

Semi-Auto range [SEMI]: The decimal point will be auto changed according to the input frequency to keep reading in the highest resolution under setting position of decimal point.

according to the setting of decimal point. So, it's possible to show "overflow", if the input frequency is over the display range.

Manual range [MANUL]: The decimal point will be fixed

Time out of input:

In the case of low frequency, the meter can not to identify that is low frequency and no input until the next pulse input. Sometimes, it takes a long period.

The meter builds in a time out function to cut out the reading to be "0". There are two modes [MANUL] / [Auto] can be programmed.

Manual [MANUL]: There is a period named **ito** can be set from 0.0 sec~999.9sec. The reading will display "0", when the next pulse doesn't input during the setting time.

Auto range [Auto]: The reading will display "0", when the pulse doesn't input during the time that gave by formula of meter's firmware.

Period of time out:

Settable: 0.0 sec~999.9sec

If the time out mode [ito.Md] set to be [MANUL], ito will show out.

Display & Functions

Max / Mini recording: The meter will storage the maximum and minimum value in [User Level] during power on in order to review drifting of PV.


Display functions: PV / Max(Mini) Hold / RS 485 programmable in [dSPLY] function of [inPUt GroUP]

(Please refer to step A-07)

Present Value [Pv]: The display will show the value that Relative to Input signal.

Maximum Hold [Max.H] / Minimum Hold [Mini.H]: The meter will keep display in maximum(minimum) value during power on, until manual reset by front key in [User Level], rear terminal is close [External Control Input(E.C.I.)] or press front down or up key to reset (according to setting, please functions of refer to the ECI Group)

➤ Please find the [M.H] sticker that enclosure the package of the meter to stick on the right side of square orange LED

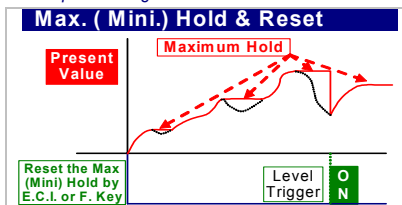

Remote Display by RS485 command [RS485]: The meter will show the value that received from RS485 sending. In past, The meter normally receive 4~20mA or 0~10V from AO or digital output from BCD module of PLC. We support a new solution that PV shows the value from RS485 command of master can so that can be **save cost and wiring** from PLC.


Front key functions: Relative PV / PV Hold / Reset for maxi(mini) hold / Reset for relay energized latch programmable in [dn.KEY] function of [inPUt GroUP]

Relative PV [REL.Pv]: [dn.KEY] function can be set to be [REL.Pv] function. When user press the [key], the display will show the differential value(ΔPV), until press [key] again.

➤ Please find the [R.PV] sticker to stick on the right side of square red LED.

PV Hold [Pv.HLD]: [dn.KEY] function can be set to be [Pv.HLD] function. When user press the [key], the display will be hold until press the [key] again.

➤ Please find the [P.V.H] sticker to stick on the right side of square red LED.

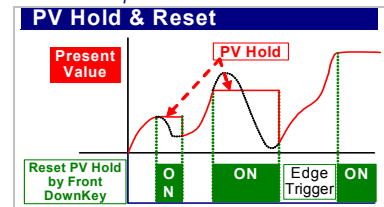


Reset for Max(Mini) Hold: when the [dSPLY] in [inPUt GroUP] set to be [Max.H] or [Mini.H], [dn.KEY] function can be set to be [M.rSt] to reset the display when it is holding in maxim or mini value.

Reset for relay energized latch: when the [rY1.Md] in [rELAY GroUP] set to be [Hi.HLD] or [Lo.HLD], [dn.KEY] function can be set to be [rY.rSt] to reset the relay when it is energizing and latching.

Low cut:

If the setting value is positive, it means when the absolutely value of $PV \leq$ Setting value, the display will be 0. If the setting value is negative, it means when the PV under setting value ($PV \leq -$ Setting value), the display will be setting value.

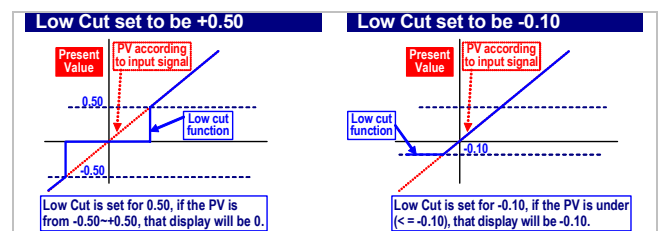


Digital fine adjust:

Users can get Fine Adjustment for Zero & Span of PV by front key of the meter, and "Just Key In" the value which user want to show in the current input signals.

Especially, the [Pv.Zro] & [Pv.SPn] are not only in zero & span of PV, but also any lower point for [Pv.Zro] & higher point for [Pv.SPn]. The meter will be linearization for full scale.

The adjustment can be clear in function [Z.S.Clr].

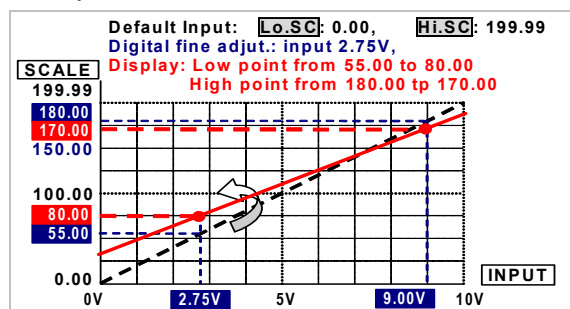


Compensation factor: Settable range: 0.001~9.999

The factor is compensation of display. There are some applications that are indirect detection. User can set the factor to compensate the display.

Reading Stable Function

Average:


Basically, the sampling rate of meter is 15cycles/sec. If the function set to be 3 times, It means the meter will update of display will be 5 times/sec.

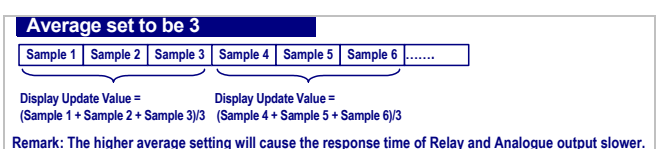

Remark: The higher average setting will cause the response time of Relay and Analogue output slower.

Moving average:

If the function to be set 3 times, the meter will update delay in first 3 samples, then it will update 15 times/sec continuously.

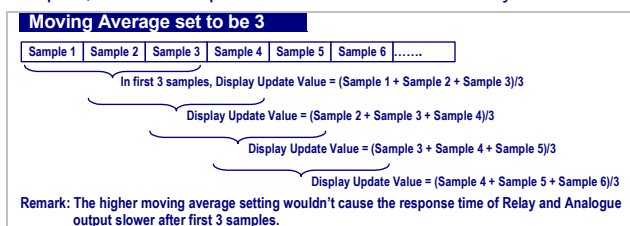

Digital filter:


The digital filter can reduce the magnetic noise in field.

Control functions(option)


Relay energized mode: Hi/Lo / Hi.HLd / Lo.HLd programmable

Hi: Relay will energize when PV > Set-Point

Lo: Relay will energize when PV < Set-Point

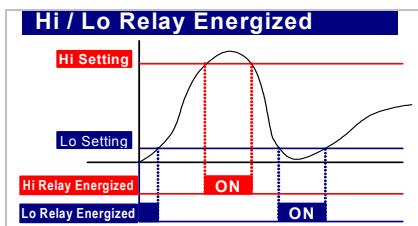


Hi.HLd (Lo.HLd): When the PV is Higher (or lower) than set-point, the relay will be energized and latch until manual reset by from key in [User Level] or press down key to reset(If the [dn.KEY] function set to be [Y.RSt])

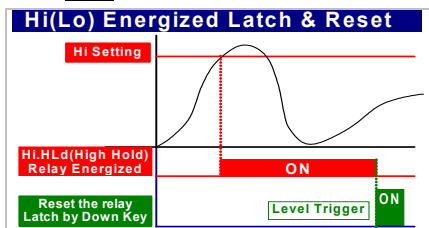

Energized functions:

Start delay / Energized & De-energized delay / Hysteresis

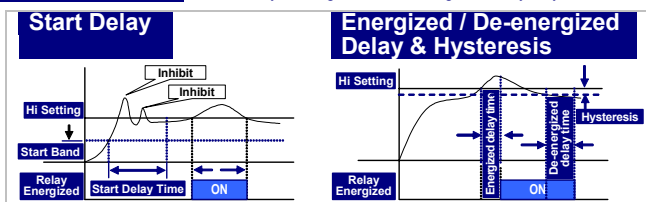

Analogue output(option)

Please specify the output type either an 0~10V or 4(0)~20mA in ordering. The programmable output low and high scaling can be based on various display values. Reverse slope output is possible by reversing point positions.


Output range:

Voltage: 0~5V / 0~10V / 1~5V programmable
Current: 0~10mA / 0~20mA / 4~20mA programmable

Functions:

Ao.HS(output range high): setting the Display value High to versus output range High(as like as 20mA in 4~20)

Ao.LS(output range Low): setting the Display value Low to versus output range Low(as like as 4mA in 4~20)

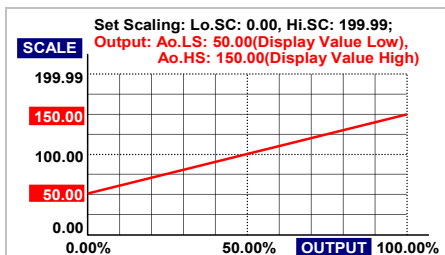

The range between Ao.HS and Ao.LS should be over 20% of span at least; otherwise, it will be got less resolution of analogue output.

Fine zero & span adjustment:


Users can get Fine Adjustment of analogue output by front key of the meter. Please connect standard meter to the terminal of analogue output. To press the front key(up or down key) of meter to adjust and check the output.

[Ao.Zro] : Fine Zero Adjustment for Analog Output;
Settable range: -38011~27524;

[Ao.Spn] : Fine Span Adjustment for Analog Output;
Settable range: -38011~27524;

RS 485 Communication(option)


The RS485's protocol is Modbus RTU mode, and baud rate up to 38400 bps. It's convenience to remote monitoring, display for reading.

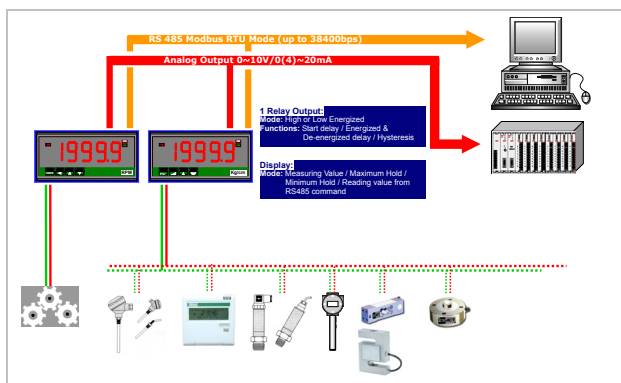

Remote display:

The meter will show the value that received from RS485 command. In past, The meter normally receive 4~20mA or 0~10V from AO or digital output from BCD module of PLC. We support a new solution that PV shows the value from RS485 command of master so that can be **save cost and wiring** from PLC.


When the [dSPly] set to be RS485, it means, the PV screen will show the number from RS485 command & data. The data(number) will be same as PV that will compare with set-point, analogue output and ECI functions so that is to control analogue output, relay energized and so on.

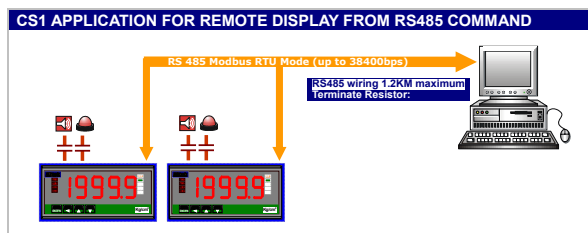

■ ERROR MASAGE

DESCRIPTION	DISPLAY	FLASH	REMARK
BEFORE POWER ON, PLEASE CHECK THE SPECIFICATION AND CONNECTION AGAIN.			
SELF-DIAGNOSIS AND ERROR CODE:			
ouFL : Display is positive-overflow (Signal is over display range)	ouFL		(Please check the input signal)
-ouFL : Display is negative-overflow (Signal is under display range)	-ouFL		(Please check the input signal)
ouFL : ADC is positive-overflow (Signal is higher than input 120%)	ouFL		(Please check the input signal)
-ouFL : ADC is negative-overflow (Signal is lower than input -120%)	-ouFL		(Please check the input signal)
E E P / F A I L : EEPROM occurs error	E E P	F A I L	(Please send back to manufactory for repaired)
A I C n G / P u : Calibrating Input Signal do not process	A I C n G	P u	(Please process Calibrating Input Signal)
A I C / F A I L : Calibrating Input Signal error	A I C	F A I L	(Please check Calibrating Input Signal)
A o C n G / P u : Calibrating Output Signal do not process	A o C n G	P u	(Please process Calibrating Output Signal)
A I C / F A I L : Calibrating Output Signal error	A I C	F A I L	(Please check Calibrating Output Signal)

■ FRONT PANEL:

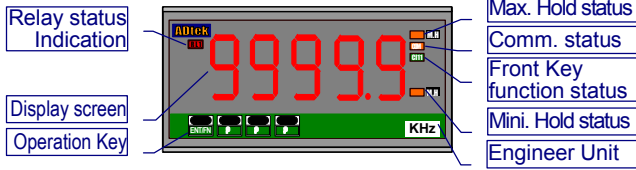

Relay status Indication

Display screen

Operation Key

Max. Hold status

Comm. status

Front Key function status

Mini. Hold status

Engineer Unit

Numeric Screens
0.8"(20.0mm) red high-brightness LED for 5 digital present value.





I/O Status Indication


- **Relay Energized:** 1 square red LED
RL1 display when Relay 1 energized;
- **RS485 Communication:** 1 square orange LED
COM will flash when the meter is receive or send data, and **COM** flash quickly means the data transient quicker.
- **Max/Mini Hold indication:** 2 square orange LEDs
MLH displayed: When the display function has been selected in Maximum or Minimum Hold function.

Stickers:
Each meter has a sticker what are functions and engineer label enclosure.

- **Relay energized mode:** **HH** **Hi** **Lo** **LL** **DO**
- **Down key functions mode:**
PV.H PV.H(PV Hold) / **Tare** Tare / **DI** DI(Digital Input)
- **M.RS** M.RS(Maximum or Minimum Reset) /
- **R.RS** R.RS(Reset fo Relay Latch)
- **Engineer Label:** over 80 types.


- **Operating Key:** 4 keys for  Enter(Function) /  Shift(Escape) /  Up key /  Down key

	Setting Status	Function Index
 Up key	Increase number	Go back to previous function index
 Down key	Decrease number	Go to next function index
 Shift key	Shift the setting position	Go back to this function index, and abort the setting
 Enter/Fun key	Setting Confirmed and save to EEPROM	From the function index to get into setting status

- **Pass Word:** Settable range:0000~9999;
User has to key in the right pass word so that get into **【 Programming Level 】**. Otherwise, the meter will go back to measuring page. If user forget the password, please contact with the service window.
- **Function Lock:** There are 4 levels programmable.
 - **None:** no lock all.
 - **User Level:** User Level lock. User can get into User Level for checking but setting.
 - **Programming Level:** Programming level lock. User can get into programming level for checking but setting.
 - **ALL:** All lock. User can get into all level for checking but setting.
- **Front Key Function**
 - The  Key can be set to be **rEL.Pv** / **Pv.HLd** / **M.rSt** / **rY.rSt** programmable.

OPERATING DIAGRAM (The detail description of operation, Please refer to operating manual)

CS1-F

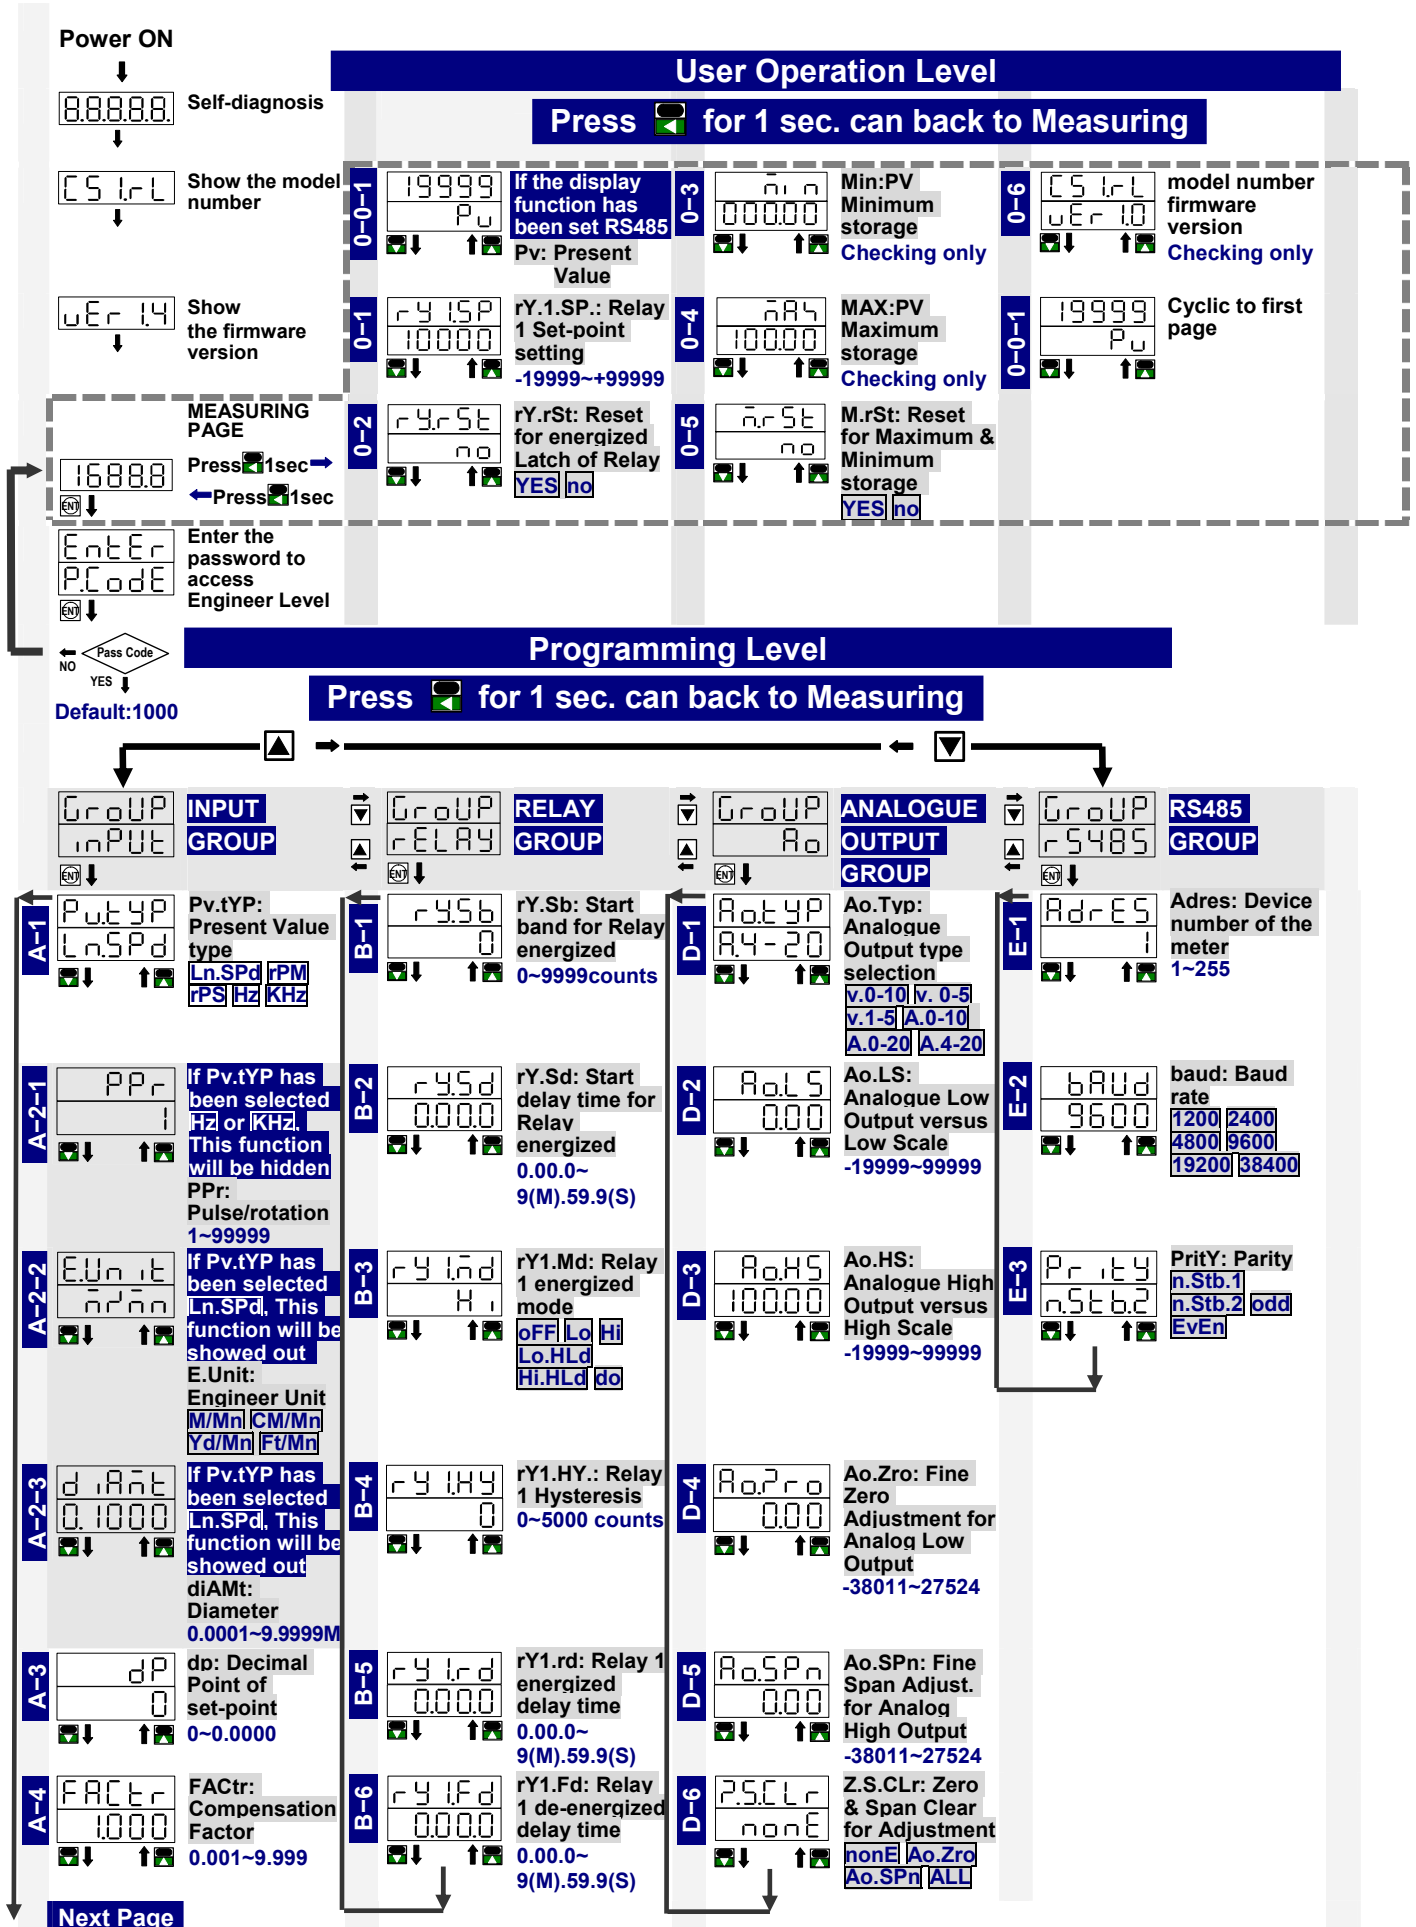

A-5	Pv.SPn 0	Pv.SPn: Fine High point Adjustment for PV display 0~+99999
A-6	S.CLr no	S.CLr: Clear Fine Span Adjustment for PV display YES no
A-7	dSPLY Pv	dSPLY: Display Function Pv Mini.H MAX.H rS485
A-8	Lo.CUt 0	Lo.Cut: Low Cut Function -19999~ +29999
A-9	ito.Md AUto	ito.Md: Input time out Mode AUto MAnUL
A-10	ito 0.0	If Ito.Md has been selected MAnUL. This function will be showed out ito: How long will be time out 0.0~999.9sec
A-11	rAnGE AUto	rAnGE: Reading Range with decimal point switching. AUto SEMi MAnUL
A-12	AvG 5	AvG: Average update for PV 1(None)~ 99 times
A-13	M.AvG 1	M.AvG: Moving Average update for PV 1(None)~ 10 times
A-14	d.FiLT 0	d.FiLT: Digital filter 0(None)/1~ 99 times
A-15	dn.KEY nonE	dn.KEY: Down key function nonE rEL.Pv Pv.HLd M.rSt rY.rSt
A-16	P.CoDE 0000	P.CoDE: Pass Code for enter Engineer Level 0000~9999
A-17	F.LoCk nonE	F.LoCk: Function Level Lock nonE USEr EnG ALL

➤ Plesae refer to operating manual for detail description.