

CS2-F Frequency Indicator



CS2-F

DESCRIPTION

CS2-F Frequency Indicator has been designed with high accuracy measurement, display and communication of Frequency.

☑ The innovation feature is auto-range input from 0.01Hz~100KHz(option ~140KHz) and the display resolution will auto-change to show the highest according to input frequency.

They are also building in 4 Relay outputs, 3 External Control Inputs, 1 Analogue output and 1 RS485(Modbus RTU Mode) interface with versatile functions such as control, alarm, re-transmission and communication for a wide range of testing and machinery control applications.




FEATURE

- Measuring Frequency **AUTO RANGE 0.01~100KHz / ~140KHz(optional)** / Voltage pulse or sine wave(specify).
- Accuracy: $\pm 0.005\%$; Display range: 0~99999; Decimal Point auto moving according to input frequency
- 4 relay can be programmed individual to be a Hi / Lo / Hi Latch / Lo Latch / Go energized with Start Delay / Hysteresis / Energized & De-energized Delay functions, or to be a remote control.
- Analogue output and RS 485 communication port in option
- 3 external control inputs can be programmed individual to be Tare (Relative PV) / PV Hold / Maximum or Minimum Hold / DI (remote monitoring) / Reset for Relay Energized Latch....
- CE Approved & RoHS

APPLICATIONS

- MCC panel, Machinery, Switch gear... for Frequency Measuring, Alarm and Remote I/O with PC/PLC
- ☑ Fantastic 4 Relay functions as like as Hi / Lo / Hi latch / Lo latch / DO(Remote control by PC/PLC).
- ☑ Flexible 3 DI functions as like as Reset for Relay energized and Remote monitoring by PC/PLC.
- Testing Equipments for Frequency Measuring, Alarm and Communication with PC/PLC
- ☑ Flexible 3 DI functions as like as Maximum/Minimum hold, PV hold and Relative PV.
- ☑ On line testing station for appliance, check points of PCB as so on.

ORDERING INFORMATION

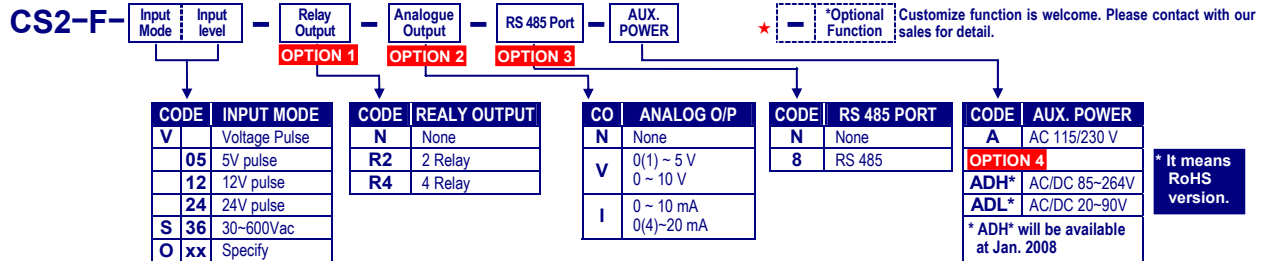

TECHNICAL SPECIFICATION

Input		
Input Frequency	Input Mode	Input Level
0.01Hz ~ 50 Hz	Voltage Pulse	High Level: over 2/3 of input level
0.01Hz ~ 100KHz		Low Level: under 1/3 of input level
0.01Hz ~ 140KHz (option)	Sine Wave	

Calibration: Doesn't need calibration

Input range: Auto range: 0.01Hz ~ 100KHz (~140KHz in option);

Accuracy: $\leq \pm 0.005\%$ of FS $\pm 1C$;

Sampling time: 15 cycles/sec($\geq 15Hz$);
f cycles/sec($\leq 15Hz$)

Response time: ≤ 100 msec(when the AvG = "1")

Time out function: Auto, Manual programmable, In manual mode, the period of time out can be set 0.0 sec~999.9sec

Display & Functions

LED: Numeric: 5 digits, 0.8"(20.0mm)H red high-brightness LED

Relay output indication: 4 square red LED

RS 485 communication: 1 square orange LED

E.C.I. function indication: 3 square green LED

Max/Mini Hold indication: 2 square orange LED

0.0000~99999 with auto moving of decimal point
Decimal point will Auto-changed according to input

Auto / Semi-Auto / Fix; 3 mode programmable

Compensate error from 0.001~9.999

Over range indication: ovFL, when input is over 120% of input range Hi

Max / Mini recording: Maxi & Mini Value of PV storage during power on.

Display functions: PV / Max(Mini) Hold / RS 485 programmable

Front key functions: Up and down key can be set to be a function as ECI.

Low cut: Settable range: -19999~29999 counts

Digital fine adjust: Pv.Zro: Settable range: 0~+99999
Pv.SPn: Settable range: 0~+99999

Reading Stable Function

Average: Settable range: 1~99 times

Moving average: Settable range: 1(None)~10 times

Digital filter: Settable range: 0(None)/1~99 times

Control Functions(option)

Set-points:	Four set-points
D.P. of set point:	Programmable from 0 / 0.0 / 0.00 / 0.000 / 0.0000
Control relay:	Four relays Relay 2 & Relay 3: Dual FORM-C, 5A/230Vac, 10A/115V Relay 1 & Relay 4: Dual FORM-A, 1A/230Vac, 3A/115V
Relay energized mode:	Energized levels compare with set-points: <i>Hi / Lo / Go.12 / Go.23 / Hi.HLd / Lo.HLd; programmable DO function: Energized by RS485 command of master.</i>
Energizing functions:	Start delay / Energized & De-energized delay / Hysteresis Energized Latch Start band (Minimum level for Energizing): 0~9999counts Start delay time: 0:00.0~9(Minutes):59.9(Second) Energized delay time: 0.00.0~9(Minutes):59.9(Second) De-energized delay time: 0.00.0~9(Minutes):59.9(Second) Hysteresis: 0~5000 counts

External Control Inputs(ECI)

Input mode:	3 ECI points, Contact or open collect input, Level trigger
Functions:	<i>Relative PV(Tare) / PV Hold / Reset Max or Mini. Hold / DI / Reset for Relay Energized latch</i>
Debouncing time:	Settable range 5 ~255 (x 8mseconds)

Analogue output(option)

Accuracy:	$\leq \pm 0.1\%$ of F.S.; 16 bits DA converter
Ripple:	$\leq \pm 0.1\%$ of F.S.
Response Time:	≤ 100 msec. (10~90% of input)
Isolation:	AC 2.0 KV between input and output
Output Range:	Specify either Voltage or Current output in ordering Voltage: 0~5V / 0~10V / 1~5V programmable Current: 0~10mA / 0~20mA / 4~20mA programmable
Output Capability:	Voltage: 0~10V; $\geq 1000\Omega$; Current: 4(0)~20mA; $\leq 600\Omega$ max
Functions:	Ao.HS (output range high): Settable range: -19999~99999 Ao.LS (output range Low): Settable range: -19999~99999 Ao.LMt (output High Limit): 0.00~110.00% of output High Ao.Zro: Settable range: -38011~27524 Ao.SPn: Settable range: -38011~27524
Digital fine adjust:	

RS 485 Communication(option)

Protocol:	Modbus RTU mode
Baud Rate:	1200/2400/4800/9600/19200/38400 programmable
Data Bits:	8 bits
Parity:	Even, odd or none (with 1 or 2 stop bit) programmable
Address:	1 ~ 255 programmable
Remote Display:	to show the value from RS485 command of master
Distance:	1200M
Terminate Resistor:	150 Ω at last unit.

Electrical Safety

Dielectric Strength:	AC 2.0 KV for 1 min, Between Power / Input / Output / Case
Insulation Resistance:	$\geq 100M$ ohm at 500Vdc, Between Power / Input / Output
Isolation:	Between Power / Input / Relay / Analogue / RS485 / E.C.I.
EMC:	EN 55011:2002; EN 61326:2003
Safety(LVD):	EN 61010-1:2001

Environmental



Operating Temp.:	0~60 °C
Operating Humidity:	20~95 %RH, Non-condensing
Temp. Coefficient:	≤ 100 PPM/°C
Storage Temp.:	-10~70 °C
Enclosure:	Front panel: IEC 549 (IP54); Housing: IP20
Vibration Test:	10~55Hz, 0.75mm X, Y, Z for 2 hours(for code: ADH/ADL)

Mechanical



Dimensions:	96mm(W) x 48mm(H) x 120mm(D)
Panel Cutout:	92mm(W) x 44mm(H)
Case Material:	ABS fire-resistance (UL 94V-0)
Mounting:	Panel flush mounting
Terminal Block:	Plastic NYLON 66 (UL 94V-0) 10A 300Vac, M2.6, 1.3~2.0mm ² (16~12AWG)
Weight:	550g / 350g(Aux. Power Code: ADH or ADL)

Power


Power Supply:	AC115/230V,50/60Hz; Optional: AC/DC 85~264V or 20~90V(RoHS version)
Excitation Supply:	DC12V, 24V/30mA maximum
Power Consumption:	5.0VA maximum
Back Up Memory:	By EEPROM

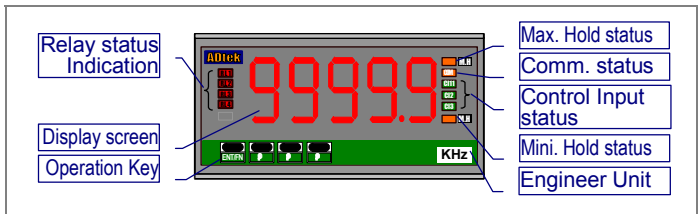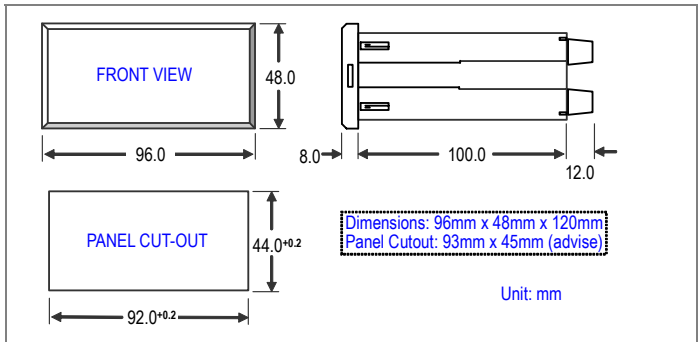FRONT PANEL**DIMENSIONS****INSTALLATION**


The meter should be installed in a location that dose not exceed the maximum operating temperature and provides good air circulation.

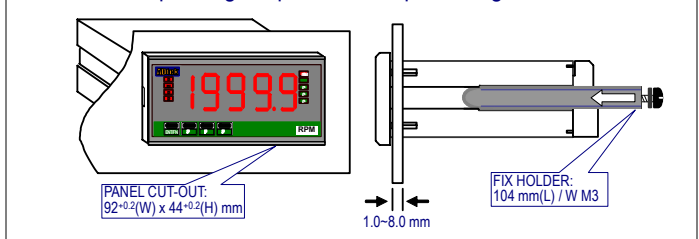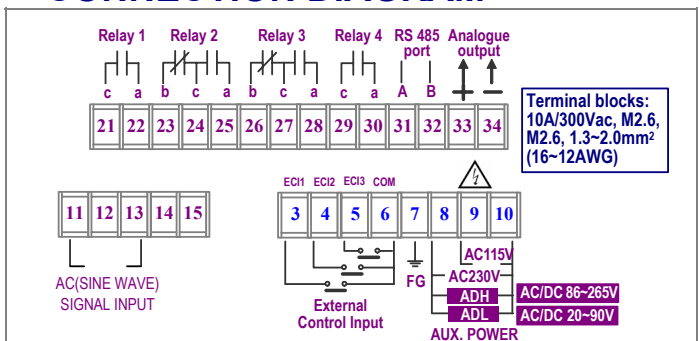**CONNECTION DIAGRAM**

Please check the voltage of power supplied first, and then connect to the specified terminals. It is recommended that power supplied to the meter be protected by a fuse or circuit breaker.

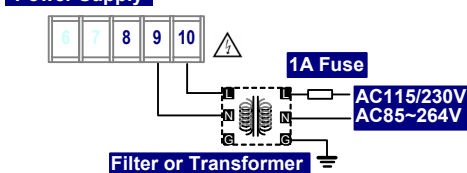Power Supply


RS485 Communication Port

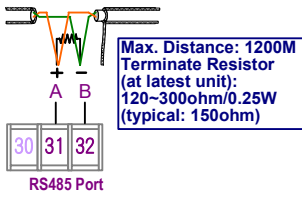

Remote Display by RS485 command [RS485]: The meter will show the value that received from RS485 sending. In past, The meter normally receive or 0~10V from AO or digital output from BCD module of PLC. We support a new solution that PV shows the value from RS485 command of master can so that can be **save cost and wiring** from PLC.

PV Hold [Pv. HLD]: [External Control Input(E.C.I.)] can be set to be [Pv. HLD] function(Please refer to the function of ECI Group). The display will be hold, when the E.C.I. is closed.

➢ Please find the **ECI P.M.I** sticker to stick on the right side of square green LED.

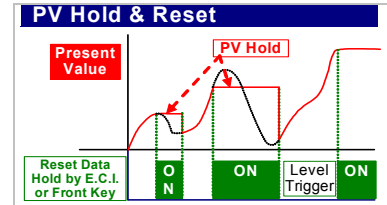

FUNCTION DESCRIPTION

Input Functions

Input range: **Auto-Range:** 0.01Hz~100.00KHz(option 140KHz), The meter has been designed very wide input auto-range from 0.01Hz~100.00KHz (Option: 0.01Hz~140.00KHz) that can cover almost any application for RPM, Linear Line Speed and Frequency. User doesn't need to specify the input range.

Auto range display: programmable between Auto Range / Semi-Auto Range / manual range, The description as below,

Auto range [Auto]: The decimal point will be auto changed according to the input frequency so that keep in the highest resolution.

Semi-Auto range [SEMI]: The decimal point will be auto changed according to the input frequency to keep reading in the highest resolution under setting position of decimal point. according to the setting of decimal point. So, it's possible to show "overflow", if the input frequency is over the display range.

Manual range [MANUL]: The decimal point will be fixed

Time out of input:

In the case of low frequency, the meter can not to identify that is low frequency and no input until the next pulse input. Sometimes, it takes a long period.

The meter builds in a time out function to cut out the reading to be "0". There are two modes **[MANUL]** / **[Auto]** can be programmed.

Manual [MANUL]: There is a period named **[to]** can be set from 0.0 sec~999.9sec. The reading will display "0", when the next pulse doesn't input during the setting time.

Auto range [Auto]: The reading will display "0", when the pulse doesn't input during the time that gave by formula of meter's firmware.

Period of time out:

Settable: 0.0 sec~999.9sec
If the time out mode **[to.Md]** set to be **[MANUL]**, it will show out.

Display & Functions


Max / Mini recording: The meter will storage the maximum and minimum value in **[User Level]** during power on in order to review drifting of PV.

Display functions: **PV / Max(Mini) Hold / RS 485 programmable in [dSPly] function of [inPUt GroUP]**

Present Value [Pv]: The display will show the value that Relative to Input signal.


Maximum Hold [Max.H] / Minimum Hold [Mini.H]: The meter will keep display in maximum(minimum) value during power on, until manual reset by front key in **[User Level]**, rear terminal is close **[External Control Input(E.C.I.)]** or press front down or up key to reset (according to setting, please functions of refer to the ECI Group)

➢ Please find the **MI** sticker that enclosure the package of the meter to stick on the right side of square orange LED

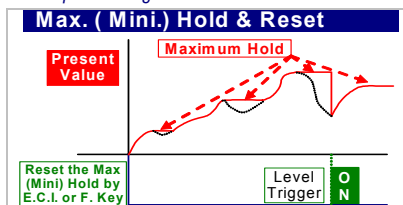


Low cut:

If the setting value is positive, it means when the absolutely value of $PV \leq$ Setting value, the display will be 0. If the setting value is negative, it means when the PV under setting value ($PV \leq -$ Setting value), the display will be setting value.

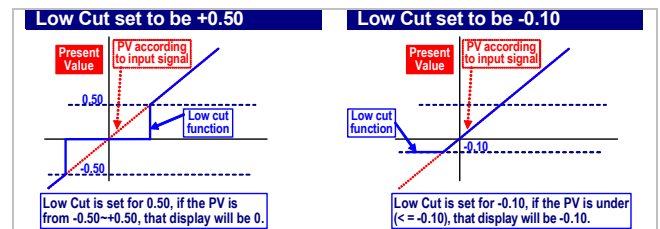

Digital fine adjust:

Users can get Fine Adjustment for Zero & Span of PV by front key of the meter, and "Just Key In" the value which user want to show in the current input signals. Especially, the **[Pv.Zro]** & **[Pv.SPn]** are not only in zero & span of PV, but also any lower point for **[Pv.Zro]** & higher point for **[Pv.SPn]**. The meter will be linearization for full scale. The adjustment can be clear in function **[Z.S.Clr]**.

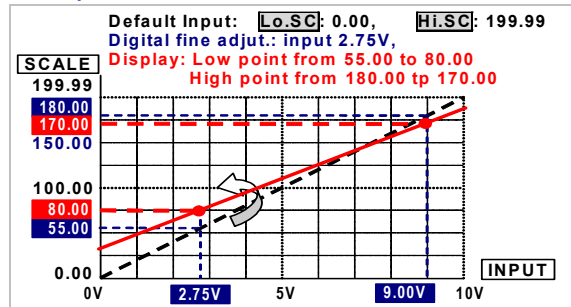


Compensation factor: Settable range: 0.001~9.999

The factor is compensation of display. There are some applications that are indirect detection. User can set the factor to compensate the display.

Reading Stable Function


Average:

Basically, the sampling rate of meter is 15cycles/sec. If the function set to be 3 times, It means the meter will update of display will be 5 times/sec.

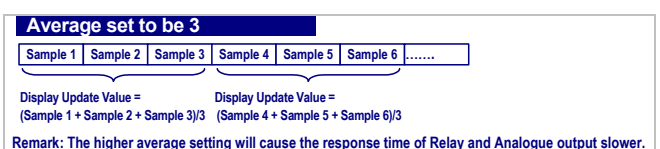

Moving average:

If the function to be set 3 times, the meter will update delay in first 3 samples, then it will update 15 times/sec continuously.

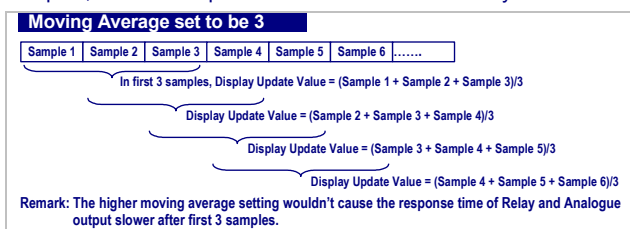

Digital filter:

The digital filter can reduce the magnetic noise in field.

Control functions(option)

Relay energized mode: *Hi / Lo / Go-1.2 / Go-2.3 / Hi.HLd / Lo.HLd / do programmable*

Hi: Relay will energize when PV > Set-Point

Lo: Relay will energize when PV < Set-Point

Go-1.2: This function is programmable in Relay 4 only.


If the Relay 4 set to be Go function, the relay will compare with [rY1.SP] and [rY2.SP].

Go relay energized when the condition is [rY1.SP] (Hi) > PV > [rY2.SP] (Lo)

Go-2.3: This function is programmable in Relay 4 only.


If the Relay 4 set to be Go function, the relay will compare with [rY2.SP] and [rY3.SP].

Go relay energized when the condition is [rY2.SP] (Hi) > PV > [rY3.SP] (Lo)

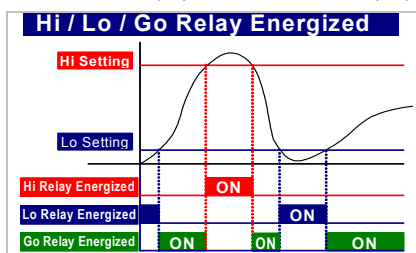

Hi.HLd (Lo.HLd): When the PV is Higher (or lower) than set-point, the relay will be energized and latch until manual reset by from key in [User Level] ,


[External Control Input(E.C.I.)] is closed or Press front down or up key to reset (UP Key or Down Key functions have been set to be "YES").

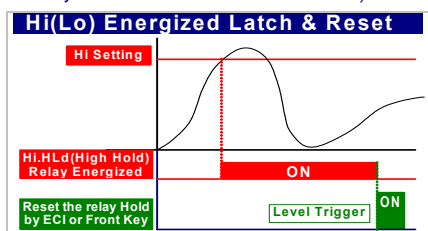

DO function: Energized by RS485 command of master.

The function was designed to get remote control by RS485 command of master. The typical application is to control a switch in field from computer center as like as digital output(DO) of PLC.

Energized functions: Start delay / Energized & De-energized delay / Hysteresis

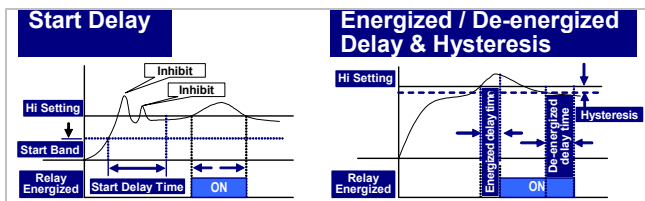

External Control Inputs(ECI)

The three external control inputs are individually programmable to perform specific meter control or display functions. All E.C.I. have been designed in level trigger actions. Please pay attention, the EC1 or EC12 input will be disable while UP or Down Key has been set to be "YES".

Input mode:

Functions:

3 ECI points, Contact or open collect input, level trigger


Relative PV / PV Hold / Reset Max or Mini. Hold / DI / Reset for Relay Energized latch: programmable

Relative PV or Tare: The E.C.I. can be set to be

Rel.PV function. When the E.C.I. is closed, the reading will show the differential value.


PV Hold: The E.C.I. can be set to be **Pv.HLd** function.

The display will be hold when the E.C.I. is closed, until the E.C.I. is to be open. Please refer to the below figure.

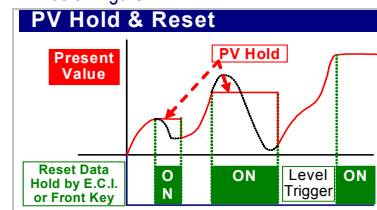

Reset for Maximum or Minimum Hold: When the

[Display] function in [iNPUT GroUP] selected **MAX.H** or **Mini.H**, the display will show Maximum or Minimum value, and can be reset by the E.C.I (close). Please refer to the figure as below.

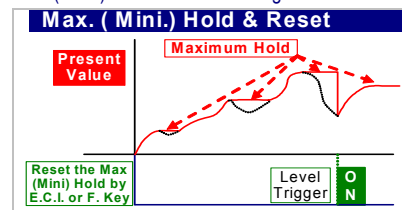

DI: The E.C.I can be set to be **di** function, when the meter building in RS485 port. It is easier to get remote monitoring a switch status through the meter as like as DI of PLC.

Reset for Relay Energized Latch: If relay energized mode has set to be Energized latch(**Hi.HLd/Lo.HLd**), the E.C.I. can be set to be **Y.rst**. When the PV meets the condition of relay energizing, the relay will be energized and latch until the E.C.I. is closed.

Debouncing time:

The function is for avoiding noise signal to into the meter. And The basic period is 8m seconds. It means you set the number that has to multiple 8m seconds.

For example:

[**dEbnC**] set to be 5, it means 5 x 8m seconds = 40m seconds

Analogue output(option)

Please specify the output type either an 0~10V or 4(0)~20mA in ordering. The programmable output low and high scaling can be based on various display values. Reverse slope output is possible by reversing point positions.

Output range:

Voltage: 0~5V / 0~10V / 1~5V programmable

Current: 0~10mA / 0~20mA / 4~20mA programmable


Ao.HS(output range high): setting the Display value High to versus output range High(as like as 20mA in 4~20)

Ao.LS(output range Low): setting the Display value Low to versus output range Low(as like as 4mA in 4~20)

Functions:

RS 485 communication(option)



The RS485's protocol is Modbus RTU mode, and baud rate up to 38400 bps. It's not only convenience to remote monitoring, display for reading and ECI status, but also for remote control in the case that doesn't have any DIO device in the field.

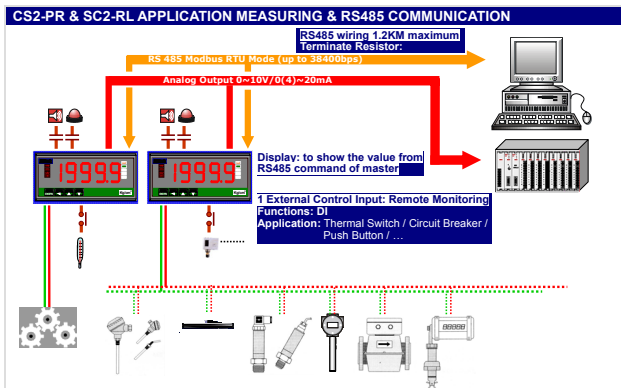

Remote display:


The meter will show the value that received from RS485 command. In past, The meter normally receive 4~20mA or 0~10V from AO or digital output from BCD module of PLC. We support a new solution that PV shows the value from RS485 command of master so that can be **save cost and wiring** from PLC.

When the [diPLY] set to be RS485, it means, the PV screen will show the number from RS485 command & data. The data(number) will be same as PV that will compare with set-point, analogue output and ECI functions so that is to control analogue output, relay energized and so on.

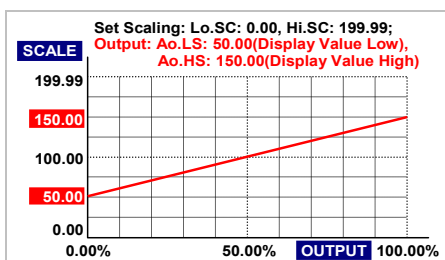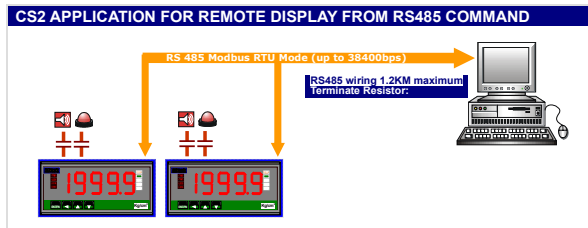

The range between Ao.HS and Ao.LS should be over 20% of span at least; otherwise, it will be got less resolution of analogue output.

Ao.LMt(output High Limit): 0.00~110.00% of output High
User can set the high limit of output to avoid a damage of receiver or protection system.

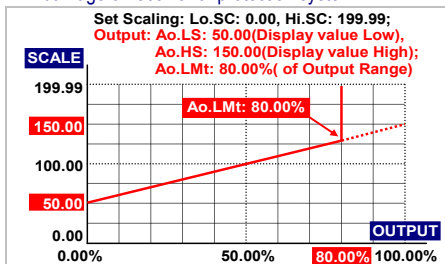

Fine zero & span adjustment:

Users can get Fine Adjustment of analogue output by front key of the meter. Please connect standard meter to the terminal of analogue output. To press the front key(up or down key) of meter to adjust and check the output.


[**Ao.Zro**] : Fine Zero Adjustment for Analog Output;
Settable range: -38011~27524;

[**Ao.Spn**] : Fine Span Adjustment for Analog Output;
Settable range: -38011~27524;

■ ERROR MASAGE

DESCRIPTION	DISPLAY	FLASH	REMARK
BEFORE POWER ON, PLEASE CHECK THE SPECIFICATION AND CONNECTION AGAIN.			
SELF-DIAGNOSIS AND ERROR CODE:			
ouFL : Display is positive-overflow (Signal is over display range)	ouFL		(Please check the input signal)
-ouFL : Display is negative-overflow (Signal is under display range)	-ouFL		(Please check the input signal)
ouFL : ADC is positive-overflow (Signal is higher than input 120%)	ouFL		(Please check the input signal)
-ouFL : ADC is negative-overflow (Signal is lower than input -120%)	-ouFL		(Please check the input signal)
EeP / FAiL : EEPROM occurs error	EeP	FAiL	(Please send back to manufactory for repaired)
Ai.C.nG / Pu : Calibrating Input Signal do not process	Ai.C.nG	Pu	(Please process Calibrating Input Signal)
Ai.C. / FAiL : Calibrating Input Signal error	Ai.C.	FAiL	(Please check Calibrating Input Signal)
Ao.C.nG / Pu : Calibrating Output Signal do not process	Ao.C.nG	Pu	(Please process Calibrating Output Signal)
Ai.C. / FAiL : Calibrating Output Signal error	Ai.C.	FAiL	(Please check Calibrating Output Signal)

FRONT PANEL:

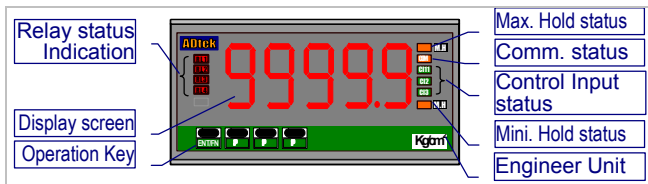

Numeric Screens

0.8”(20.0mm) red high-brightness LED for 5 digital present value.

I/O Status Indication

Relay Energized: 4 square red LED

- RL1** display when Relay 1 energized;
- RL2** display when Relay 2 energized;
- RL3** display when Relay 3 energized;
- RL4** display when Relay 4 energized;

External Control Input Energized: 3 square green LED

- EC1** display when E.C.I. 1 close(dry contact)
- EC2** display when E.C.I. 2 close(dry contact)
- EC3** display when E.C.I. 3 close(dry contact)

RS485 Communication: 1 square orange LED

COM will flash when the meter is receive or send data, and **COM** flash quickly means the data transient quicker.

Max/Mini Hold indication: 2 square orange LEDs

M.H displayed: When the display function has been selected in Maximum or Minimum Hold function.

Stickers:

Each meter has a sticker what are functions and engineer label enclosure.

Relay energized mode: **HH HI LO LL DO**

E.C.I. functions mode:

- PV.H** PV.H(PV Hold) / **Tare** Tare / **DI** DI(Digital Input)
- M.RS** M.RS(Maximum or Minimum Reset) /
- R.RS** R.RS(Reset fo Relay Latch)

Engineer Label: over 80 types.

Operating Key: 4 keys for **ENTER** Enter(Function) / **ESC** Shift(Escape) / **▲** Up key / **▼** Down key

	Setting Status	Function Index
▲ Up key	Increase number	Go back to previous function index
▼ Down key	Decrease number	Go to next function index
ESC Shift key	Shift the setting position	Go back to this function index, and abort the setting
ENTER Enter/Fun key	Setting Confirmed and save to EEPROM	From the function index to get into setting status

Pass Word: Settable range:0000~9999;

User has to key in the right pass word so that get into **[Programming Level]**. Otherwise, the meter will go back to measuring page. If user forget the password, please contact with the service window.


Function Lock: There are 4 levels programmable.

- **None:** no lock all.
- **User Level:** User Level lock. User can get into User Level for checking but setting.
- **Programming Level:** Programming level lock. User can get into programming level for checking but setting.
- **ALL:** All lock. User can get into all level for checking but setting.

Front Key Function

- The **▲**Key can be set to be the same function as the setting of EC1.
Ex. The EC1 set to be **Pv.Hld** and the function **[E.1=UP]** set to be **YES** in **[ECI Group]**. When user presses **▲**Key, the PV will hold as like as EC1 close.
 - The **▼**Key can be set to be the same function as the setting of EC2.
Ex. The EC2 set to be **REL.Pv** and the function **[E.2=dn]** set to be **YES** in **[ECI GroUP]**. When user presses **▼**Key, the PV will show relative value as like as EC2 close.
- If the front key function has been set, the terminal input for ECI will be disabling.

OPERATING DIAGRAM (The detail description of operation, Please refer to operating manual)

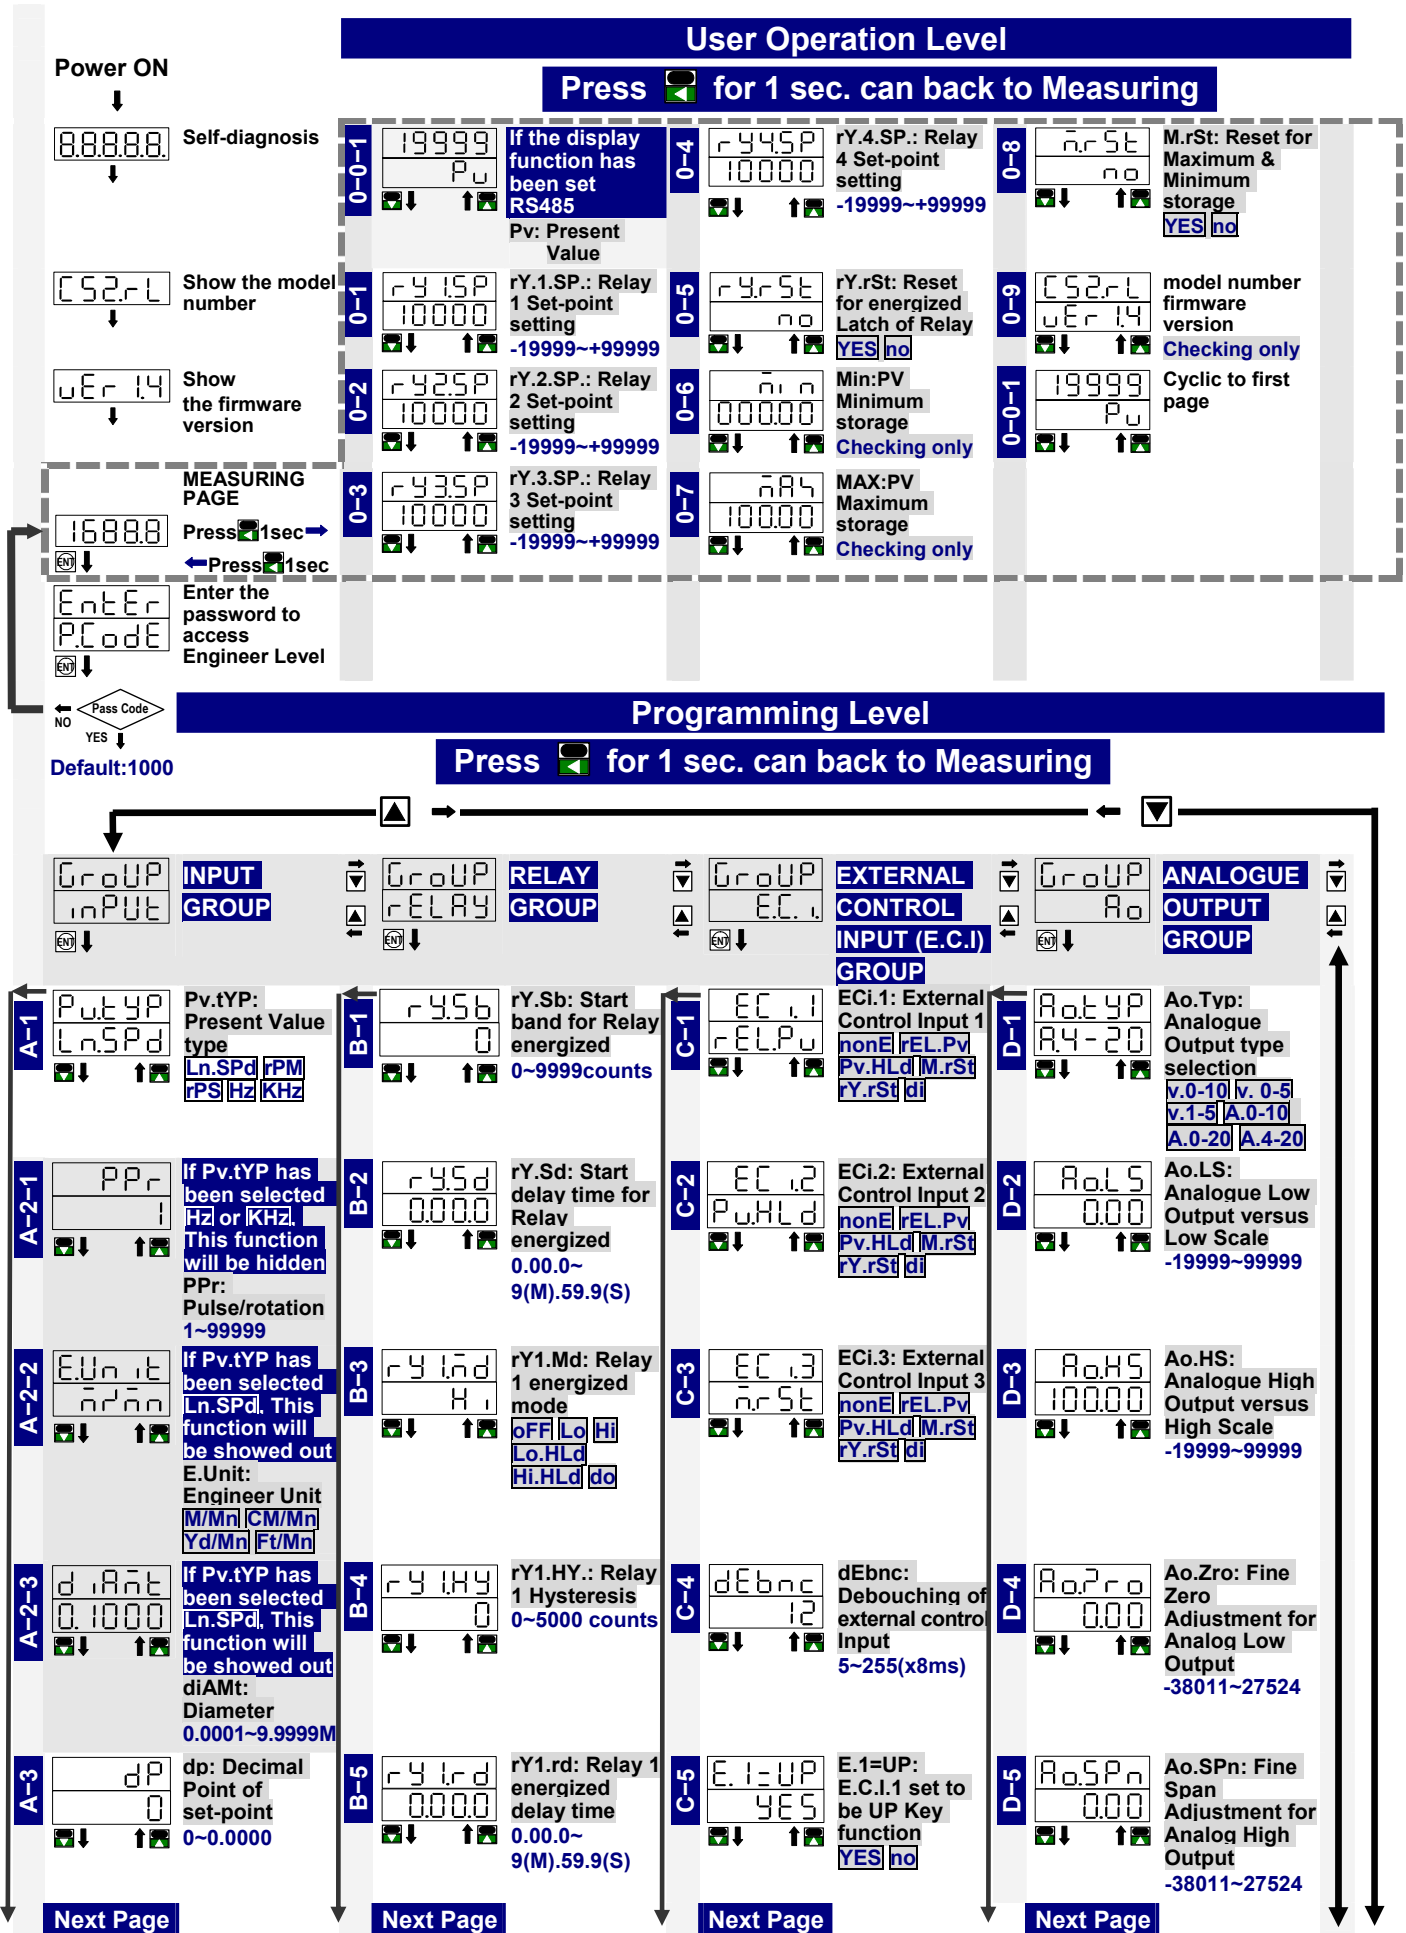

A-4	FACTr 1.000	FACTr: Compensation Factor 0.001~9.999	B-6	rY1.Fd 0.000	rY1.Fd: Relay 1 de-energized delay time 0.00.0~9(M).59.9(S)	C-6	E.2=dn YES	E.2=dn: E.C.I.2 set to be Down Key function YES no	D-6	P.SCLr none	Z.S.Clr: Zero & Span Clear for Adjustment nonE Ao.Zro Ao.SPn ALL
A-5	Pv.SPn 0	Pv.SPn: Fine High point Adjustment for PV display 0~+99999	B-7	rY2.nd H	rY.2.Md: Relay 2 energized mode oFF Lo Hi Lo.HLd Hi.HLd do	D-7	Ro.LMt 110.00	Ao.LMt: Analog Output High Limit 0.00~110.00%	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> GROUP RS485 RS485 GROUP </div>		
A-6	S.CLr no	S.CLr: Clear Fine Span Adjustment for PV display YES no	B-8	rY2.HY 0	rY.2.HY: Relay 2 Hysteresis 0~5000 counts	E-1	AdRES 1	Adres: Device number of the meter 1~255			
A-7	dSPLY Pu	dSPLY: Display Function Pv Mini.H MAX.H RS485	B-9	rY2.rd 0.000	rY2.rd: Relay 2 energized delay time 0.00.0~9(M).59.9(S)	E-2	bAUD 9600	baud: Baud rate 1200 2400 4800 9600 19200 38400			
A-8	Lo.CUt 0	Lo.Cut: Low Cut Function -19999~+29999	B-10	rY2.Fd 0.000	rY2.Fd: Relay 2 de-energized delay time 0.00.0~9(M).59.9(S)	E-3	Pr ity n.Stb.2	Pr itY: Parity n.Stb.1 n.Stb.2 odd EvEn			
A-9	ito.nd Auto	ito.Md: Input time out Mode Auto MAnUL	B-11	rY3.nd Lo	rY3.Md: Relay 3 energized mode oFF Lo Hi Lo.HLd Hi.HLd do	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> GROUP RS485 RS485 GROUP </div>					
A-10	ito 0.0	If Ito.Md has been selected MAnUL, This function will be showed out ito: How long will be time out 0.0~999.9sec	B-12	rY3.HY 0	rY3.HY: Relay 3 Hysteresis 0~5000 counts						
A-11	rAnGE Auto	rAnGE: Reading Range with decimal point switching. Auto SEMI MAnUL	B-13	rY3.rd 0.000	rY3.rd: Relay 3 energized delay time 0.00.0~9(M).59.9(S)	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> GROUP RS485 RS485 GROUP </div>					
A-12	AvG 5	AvG: Average update for PV 1(None)~99times	B-14	rY3.Fd 0.000	rY3.Fd: Relay 3 de-energized delay time 0.00.0~9(M).59.9(S)						
A-13	M.AvG 1	M.AvG: Moving Average update for PV 1(None)~10times	B-15	rY4.nd Lo	rY4.Md: Relay 4 energized mode oFF Lo Hi Lo.HLd Hi.HLd do Go.12 Go.23	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> GROUP RS485 RS485 GROUP </div>					
A-14	d.FiLt 0	d.FiLt: Digital filter 0(None)/1~99times	B-16	rY4.HY 0	rY4.HY: Relay 4 Hysteresis 0~5000 counts						
A-15	P.CoDE 0000	P.CoDE: Pass Code for enter Engineer Level 0000~9999	B-17	rY4.rd 0.000	rY4.rd: Relay 4 energized delay time 0.00.0~9(M).59.9(S)	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"> GROUP RS485 RS485 GROUP </div>					
A-16	F.LoCk none	F.LoCk: Function Level Lock nonE USEr EnG ALL	B-18	rY4.Fd 0.000	rY4.Fd: Relay 4 de-energized delay time 0.00.0~9(M).59.9(S)						

> Please refer to operating manual for detail description.